无线条码扫描器

快速安装手册





警告:若非必要,请勿随意扫描此手册中条码

Ver 2.0 ZH-CN











- 1 LED指示灯
- 2 释音孔
- 3 取景窗
- 4 扫描按键
- 5 无线接收器



- 1、将随机附带的接收器插入到主设备(计算机或支持USB OTG功 能的平板)USB接口上。
- 2、请在20秒内扫描「连接匹配」条形码。
- 3、当听到扫描器发出「滴」声即已成功。
- 4、开始使用。

Вluetooth 4.0 (不包含接收器)

- 1、将蓝牙接收装置(手机或平板)蓝牙功能开启,并搜索设备。
- 2、在扫描器开机状态下长按扳机并持续10秒以上,此时蓝牙接收装置上会出现一个蓝牙键盘装置。
- 3、轻触进行蓝牙匹配,当听到扫描器发出「滴滴」声即成功。
- 4、开始使用。



CN

1958

线传输模式,同时为扫描器补充电力,充电指示灯点亮。拆除连接线缆自动转换为无线传输状态。

指示状态说明

配对方式:

- 2 插入接收器20秒内扫描连接【匹配条码】接收器灯闪烁5次 滴声后配对成功

项目	条件说明	状态	说明
*	工作时	红色	电源指示:设备启动后指示灯常亮
LED指示	扫码时	蓝色	解码指示: 当扫码成功后该指示灯闪亮
灯	蓝牙操作时	蓝色	蓝牙匹配指示: 匹配状态时闪烁,连线 成功后常亮
	充电时	橙色	充电指示: 充电时常亮,充满后熄灭
	扫描【连接匹配】条码	哔-哔哔哔哔	与接收器匹配连线失败
		哔-哔	无线匹配连线成功
	无线功能设 定时	哔-哔	设定成功 (上载和统计数据除外)
蜂鸣器		哔-哔哔哔	读码成功,但数据上载不成功
	关机状态	无操作一段时 间后-哔~	无线扫描器进入睡眠状态
		开机后-哔~	无线扫描器电力不足, 立即关机提醒

疑难排解

į	故障现象	原因	解決方法
	A To the beat on the life	检查USB接收器	重新插接接收器USB 与电脑连接是否可靠, 观察接收器指示灯是否伴随同步闪烁
	条码识读成功但不上传同时无提示音	可能工作在存储模式	扫描【实时上传】设定条形码
		波特率设定错误	请设定波特率为57600
	上传数据有乱码	波特率设定错误	请设定波特率为57600























DR50/17

Wireless Barcode Scanner

User Guide





Warning: Do not scan the barcode in this manual arbitrarily.

Ver 2.0 US-EN










EN



- 1 LED Indicator
- 2 Sound Holes
- 3 Scan Window
- 4 Scan Button
- 5 Wireless Receiver



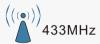

- Plug the receiver into the USB interface of the main device (Computer or Tablet PC which support USB OTG function).
- 2. Scan the barcode 'Enable Pair' in 20s.
- 3. When you hear a sound 'Beep', it means paired successfully.
- 4. Start to use the device.

Bluetooth 4.0 (Excluding the Receiver)

- 1. Enable the Bluetooth function of Bluetooth receiving device (Phone or TabletPC).
- 2.Long Press the scanning key for 10s after power on the scanner. At the moment ,a bluetooth keyboard device will appear in the BT device list of terminal device (Phone or PC).
- Click the barcode scanner's name in the Bluetooth device list of phone or Tablet PC to start bluetooth pairing. When "Beep, beep" sound is heard, it means paired successful.
- 4. Start to use the device.



Charging and cable transmission

Wired Scanner: When the scanner is connected with the main equipment via a cable, it is switched into wired transmission mode automatically. Meanwhile, the scanner is charged and the charging indicator is on. After the connection cable is removed, it is switched into wireless transmission status automatically.

Indication Status Description

Paring Method:

- 1 Long press scanning key for 8s within 20s after you let receiver connected with terminal device. The receiver indicator flashes 5 times continuously and a 'beep' sound is heard. The paring is successful.
- 2 Scan the barcode 'Enable pair' within 20s after you let receiver connected with terminal device. The receiver indicator flashes 5 times continuously and a 'beep' sound is heard. The paring is successful.

Item	Condition	Status	Description
*	In working	Red	Power Indicator: The indicator is normal ON after the device is power on.
	In scanning	Blue	Decoding indication: The indicator flashes when the scanning is successful.
LED Indicator	In Bluetooth operation	Blue	Bluetooth Matching Indication: It flashes at paring status and the indicator is normal ON after successful connection.
	In charging	Orange	Charging indicator: The indicator is normal ON in charging and OFF when charging is completed.
	Scan the barcode [Enable Pair]	Bi-Bi, Bi, Bi, Bi, Bi	Pairing and connection with receiver is failed.
1		Bi-Bi	Wireless paring and connection is successful.
	Wireless function setting	Bi-Bi	Setting is successful. (except uploading and data statistics)
Buzzer		Bi-Bi, Bi, Bi,	Reading is successful, but data uploading is failed.
	Off status	No operation for a while, beep~	Wireless scanner enters into sleep mode.
	2 310100	After being ON, Bi~	Wireless scanner is has insufficient power. Promp the device will power off automatically soon.

Troubleshooting

Fault phenomenon	Cause	Troubleshooting
Barcode reading is successful but data cannot	Check the USB receiver	Re-plug in the receiver USB and PC. Check whether the connection is reliable. Observe whether the indicator of receiver accompanies with synchronous flashing.
be uploaded. Meanwhile, there is no prompt sound.	It may be in memory mode.	Scan barcode 'Real-time Uploading Mode' to set proper work mode.
	Baud rate setting error	Please set the baudrate as 57600.
Data information has unreadable code.	Baud rate setting error	Please set the baudrate as 57600.



Enable Pair

Plug in the receiver and scan 'Enable Pair' in 20s. After a prompt sound is heard and the receiver indicator is changled into flashing from normal ON, it means paired success —fully. If there is no pairing in 20s, it shall re-plug in the rec

Scan the product barcode under Real-time Uploading Mode, and the data is transmitted to a computer in the real time.

(Default mode)



Real-time Uploading Mode



Scan the barcode under memory mode, The data information will be saved in flash memory of scanners , if you want to upload these data information, please scan the barcode "lipload Data"

Memory Mod

Scan barcode 'Upload Data' when barcode scanner saved some data information. The barcode information will be uploaded to a PC or phone which connected with the receiver.



Upload DATA



Delete all of data information were saved in the barcode scanner's flash memory.

Delete All DATA

Scan the barcode 'Data Total', it will send the total numbers of these data information saved in the barcode scanner's flash memory to Phone or PC.



DATA Total



20Sec



Auto sleep time





When there is no operation, the scanner will delay for a I while and enter into sleep mode to save power. Scan I related configuration barcode to set delay time (the I default time is 20s).