



Unpacking

The items illustrated below are included in a standard package.

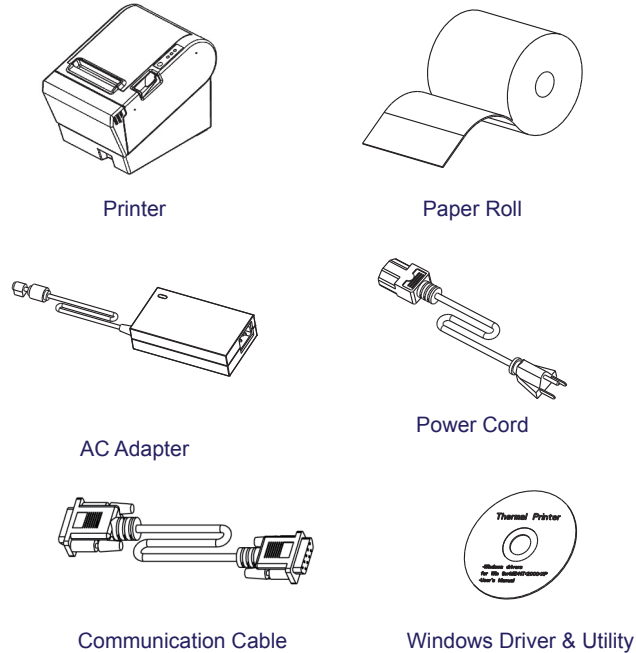


Printer parts

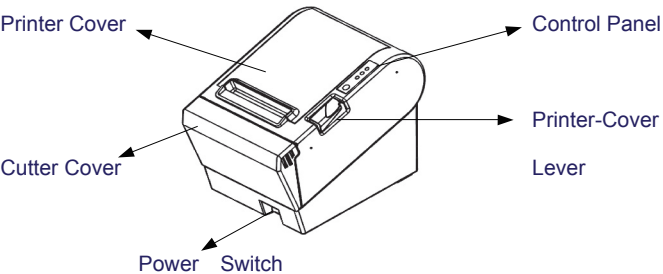

Parallel port



RS232&USB

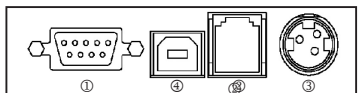

- ① Communication Connector
- ② Cash Drawer Connector
- ③ Power Supply Connector
- ④ USB


1.

Specifications

Printer method	Direct Thermal Printing
Print speed	225 mm/sec
Print resolution	203 dpi
Print font	9(W) × 17(H) / 12(W) × 24(H)
Column capacity	42 characters in Font A, 56 characters in Font B
Character set	95 Alphanumeric 32 International 128 × 5 graphics
Bar code	UPC-A 、UPC-E 、EAN-13 、EAN-8 Code 39 、Codabar 、Code 93 、 Code 128 、ITF-25
Interface	RS-232 and USB / Parallel
Cash drawer port	RJ-11
Paper dimensions	80 mm ± 0.5 mm × dia 80 mm
Paper thickness	0.06 to 0.12 mm
Power	24V
Overall dimension	150(W) × 197(D) × 143 (H) mm
Weight	1200 g

Installing the Paper Roll

1. Open the printer cover.
2. Insert the paper roll and pull out a small amount of paper, as shown below.

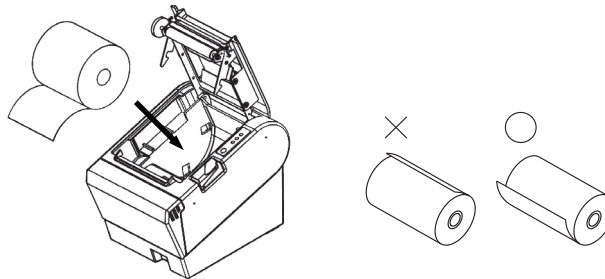

2.


Connecting the cables

Power supply cable, communication cable, and cash drawer cable.


Note:

Make sure that you use +24V power supply or equivalent for your printer. Using an incorrect power supply may cause fire or electrical shock.


1. Turn off the printer and the host computer.
2. Plug the power cord into the adaptor, then plug the adaptor into the power connector of the printer.

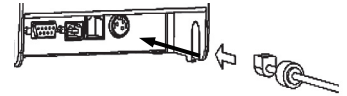

3. Plug the communication cable into the communication connector.

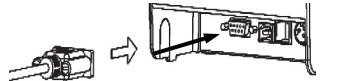

4. Plug the drawer cable into the drawer kick-out connector.

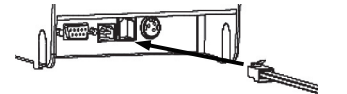

Control Panel

The control panel has three LEDs and one button.

POWER light---green light

Light on when the power is on
Light off when the power is off.

ERROR light---red light

Light on when an error occurs.

PAPER light---red light

NO light when the paper roll is loaded.
Light flash when the paper is exhausted.
Light when the paper is nearly end.

FEED button

Feed the paper.



3.